

INSTALLATION INSTRUCTIONS FOR CARGO CARRIER RAIL KIT

PART NUMBER: 6955

TOOLS REQUIRED: 7/16 WRENCH



APPROVED FOR USE WITH
DRAW-TITE CARGO CARRIERS
6500 & 6501.

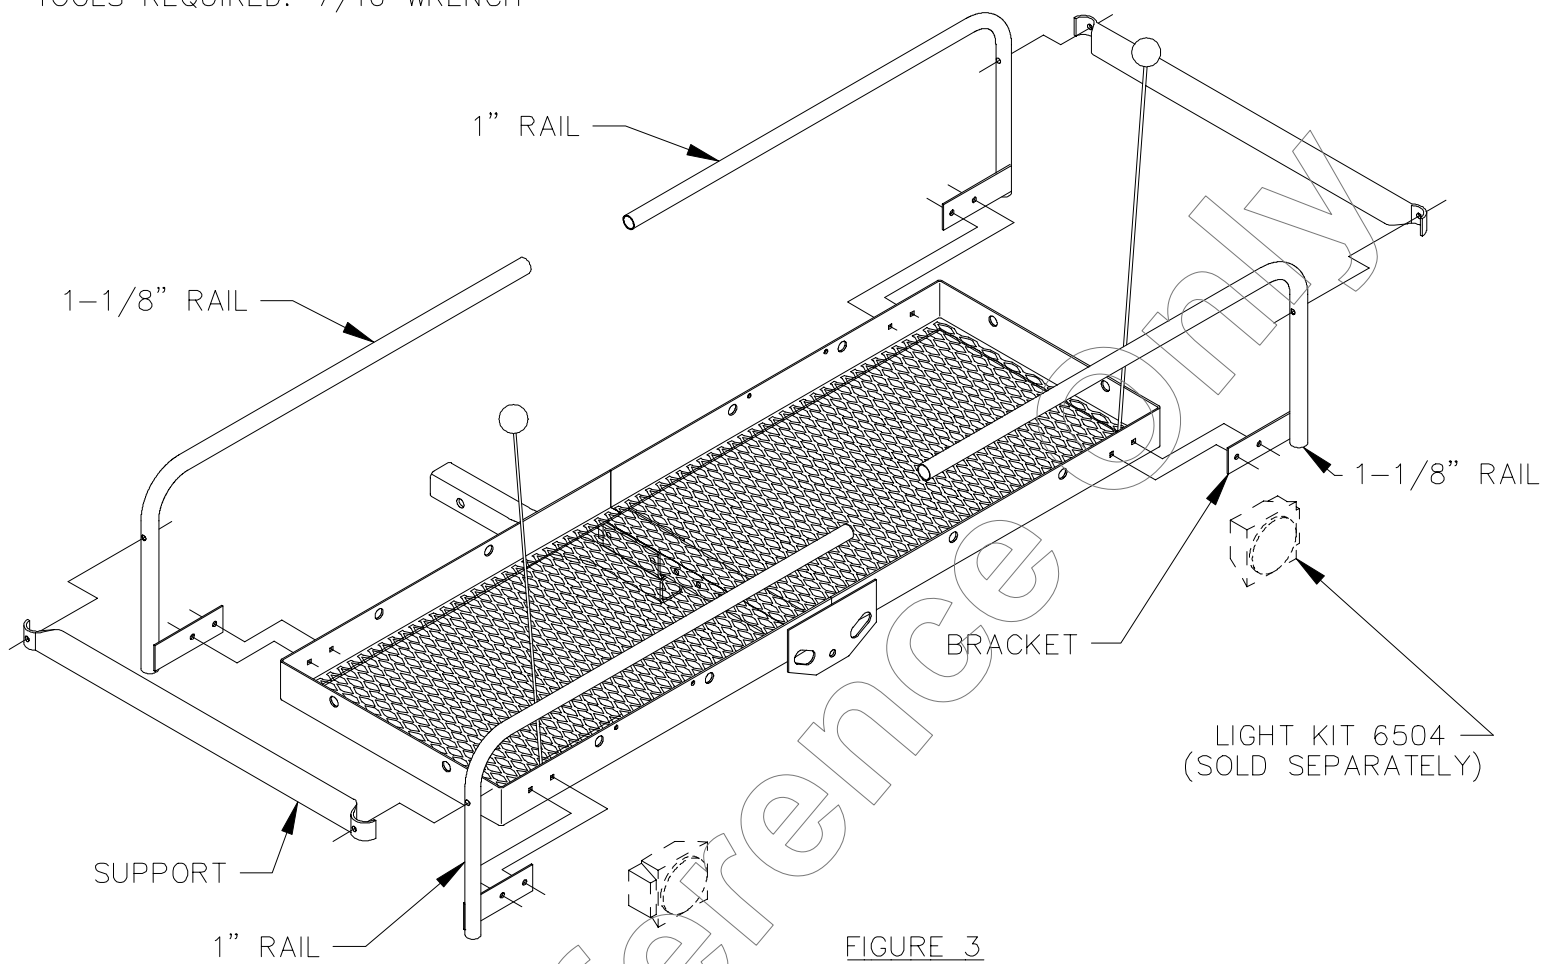


FIGURE 3

1/4-20 X 7/16 GR5
CARRIAGE BOLT
NUT/WASHER

CARGO CARRIER

BRACKET

FIGURE 1

1/4-20 X 1-1/2 GR5
NUT/WASHER

SUPPORT

RAIL

FIGURE 2

1. INSTALL RAIL KIT ON CARGO CARRIER AS SHOWN IN FIGURES 1 & 2 & 3.

NOTE: IF LIGHT KIT 6504 IS USED SANDWICH RAILS BETWEEN LIGHTS & CARGO CARRIER.

WARNING

- * LIGHT KIT 6504 (SOLD SEPARATELY) IS REQUIRED WHEN CARGO BLOCKS VEHICLE TAILLIGHTS.

CAUTION

- * CHECK SECURITY OF RAILS, FASTENERS, PIN, & CLIP AT ALL FUEL AND REST STOPS.
- * DO NOT CUT, DRILL, WELD, OR MODIFY CARGO CARRIER OR RAIL KIT.